

Unshielded Patch Panel Installing Instruction

1



180° Type




45° Angle Type

2

Color Coding Information

T568A		T568B	
Pin 5	White/Blue	Pin 5	White/Blue
Pin 4	Blue	Pin 4	Blue
Pin 1	White/Green	Pin 1	White/Orange
Pin 2	Green	Pin 2	Orange
Pin 3	White/Orange	Pin 3	White/Green
Pin 6	Orange	Pin 6	Green
Pin 7	White/Brown	Pin 7	White/Brown
Pin 8	Brown	Pin 8	Brown


3

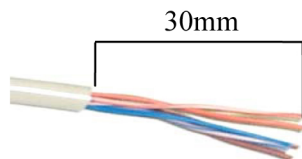

Strip approximately 30mm of the cable jacket, and separate the wires into 4 pairs.

4


KDA/KAA

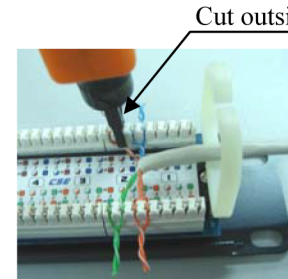

Cut outside

Lock the cable holder onto the PCB module. Follow the IDC color code & use the impact tool to punch the wires.

KRO

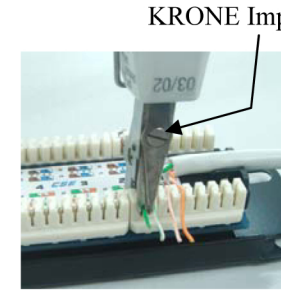


KRONE Impact Tool

Follow the IDC color code & use the KRONE impact tool to punch the wires. Cable holder is not available for KRONE compatible IDC.


5

KDA/KAA

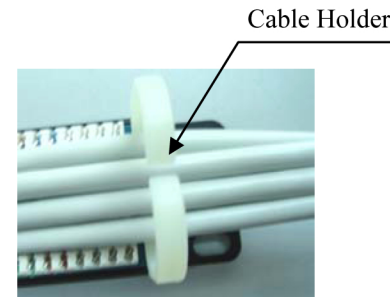

Cable Holder

KRO

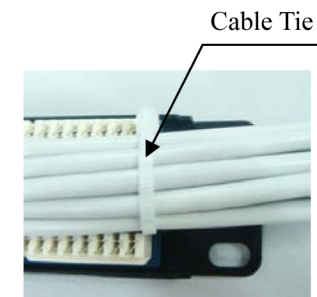

Cable Tie

Manage these cables, then complete the installation.