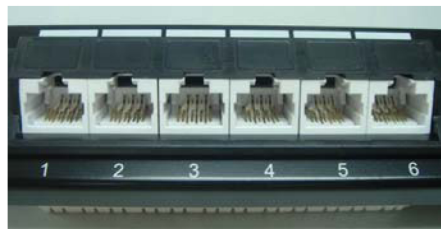
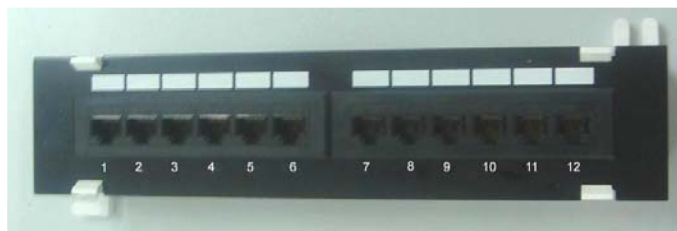
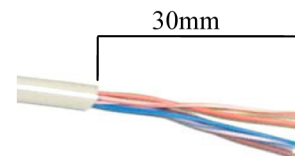


# Mini Patch Panel Installing Instruction


**1**

**45° Angle Type**

**180° Angle Type**
**2**

Color Coding Information


T568A		T568B	
Pin 5	White/Blue	Pin 5	White/Blue
Pin 4	Blue	Pin 4	Blue
Pin 1	White/Green	Pin 1	White/Orange
Pin 2	Green	Pin 2	Orange
Pin 3	White/Orange	Pin 3	White/Green
Pin 6	Orange	Pin 6	Green
Pin 7	White/Brown	Pin 7	White/Brown
Pin 8	Brown	Pin 8	Brown

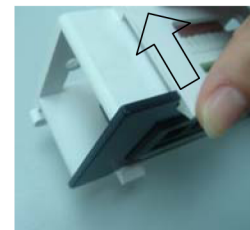**3**


Strip approximately 30mm of the cable jacket, and separate the wires into 4 pairs.

**4**


Take off the cable bracket

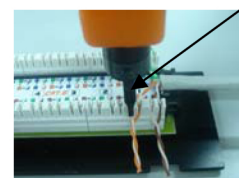**5**


Cut outside

Follow the IDC color code for T568A or T568B wiring.

Use the impact tool to punch and connect the wires on the IDC.

**6**


Lock the bracket, then complete the installation.