

S101 & S201 Wall Mount Cabinet Assembly Instructions - Rev. 3



Side Panel - x2




Front Panel



Cage Nut Rail - x4



Bottom Panel

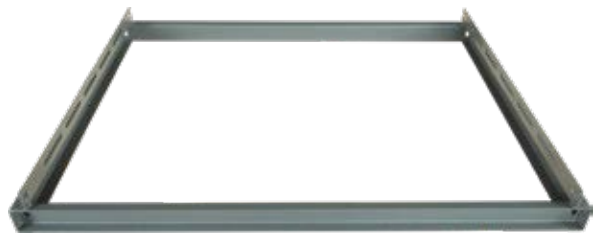

Front Frame



Rear Panel



Top Panel



M6*20 Screw



M6*12 Screw



M6 Nut




M6 Washer

Step 1 - Mount Front Frame to Bottom Panel

A - Use 2x M6*20 Screws & washer at preinstalled cage nut locations

B - Use 2x M6*12 Screws & nuts

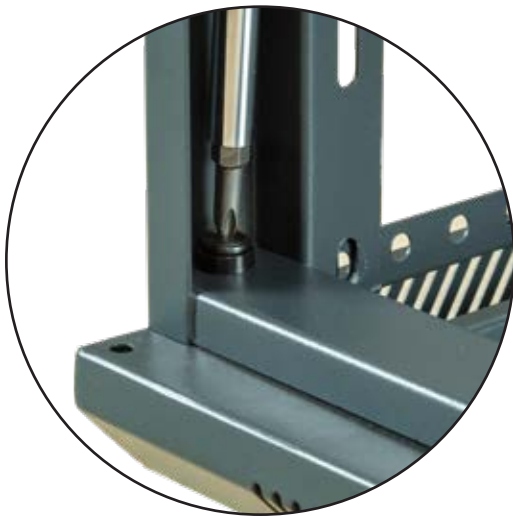

A



B

Step 2 - Mount Rear Frame to Bottom Panel

B - Use 2x M6*12 Screws & Nuts

C - Use 3x M6*12 Screws, washers, & nuts



B




C

Step 3 - Mount Top Panel to Rear & Front Frames

A - Use 2x M6*20 Screws & washers at preinstalled cage nut locations

B - Use 4x M6*12 Screws & Nuts

C - Use 3x M6*12 Screws, washers, & nuts

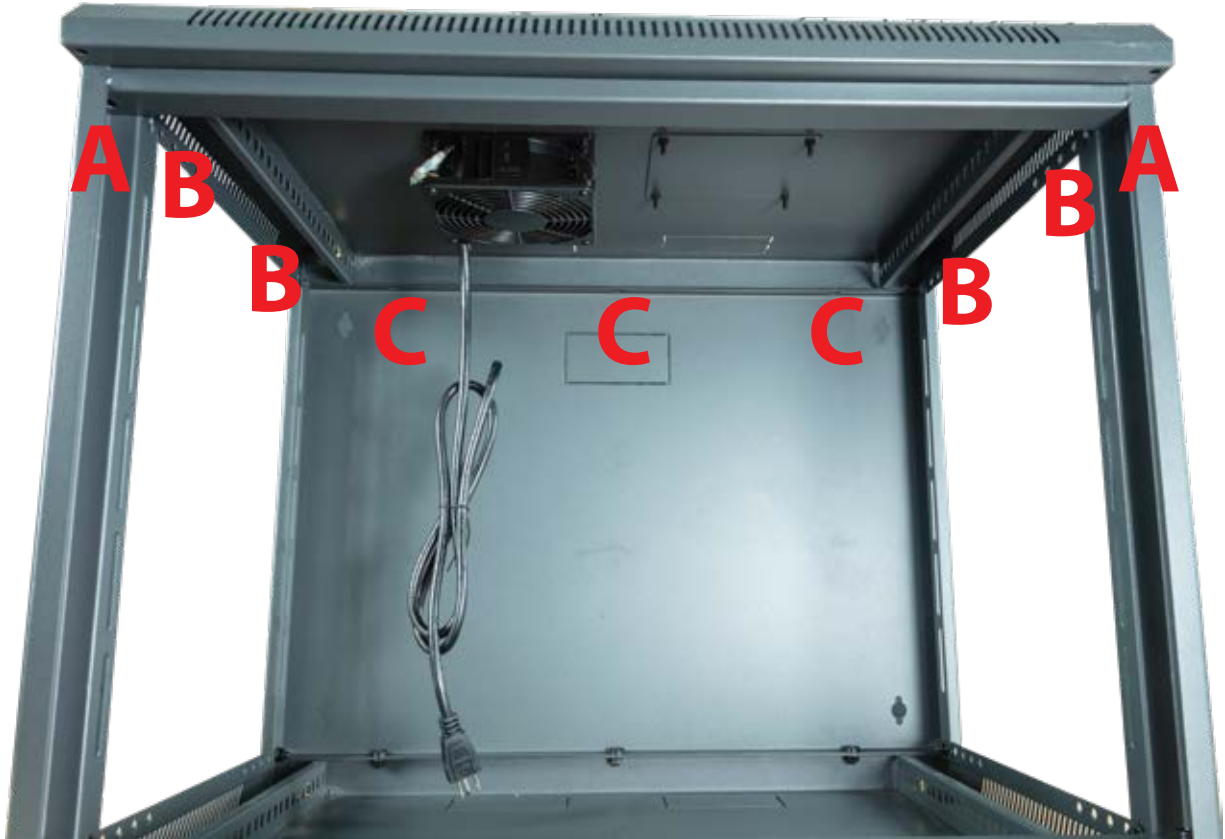

A




B



C

Step 4 - Secure Cage Nut Mounting Rails

D - Use 8x M6*12 Screws & washers at preinstalled cage nut locations

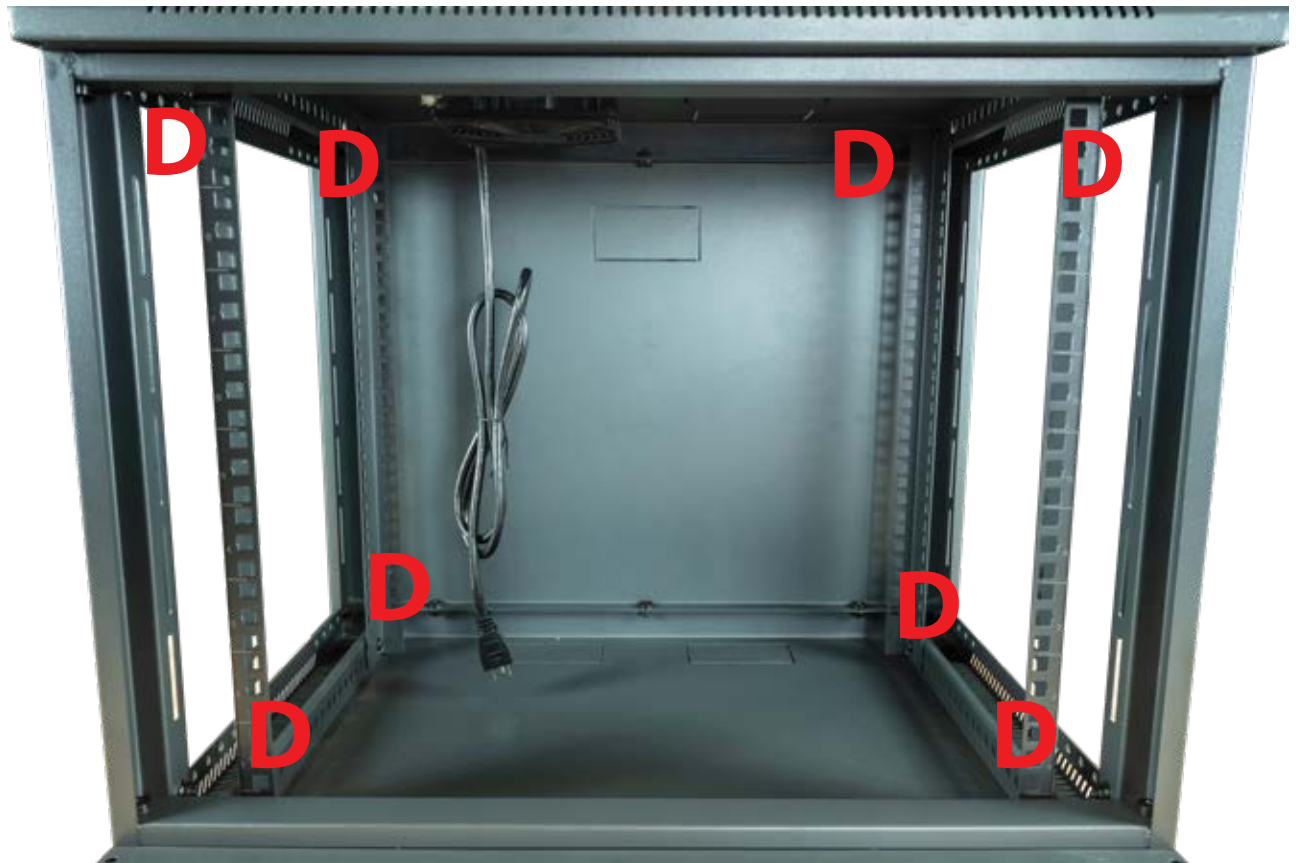

D

Step 5 - Add Side Panels and Front Panel



Assembly Finished.