Assembly Instructions

Assembly Packing List

Screws M6
QTY: 22

Door Pin
QTY: 1

Lock
QTY: 3

L Wrench
QTY: 1

Top Cover
QTY: 1

Bottom
QTY: 1

Side Panel
QTY: 2

Rear Panel
QTY: 1

Frame
QTY: 2

Glass Door
QTY: 1

Mounting Profile
QTY: 4

Exploded-View

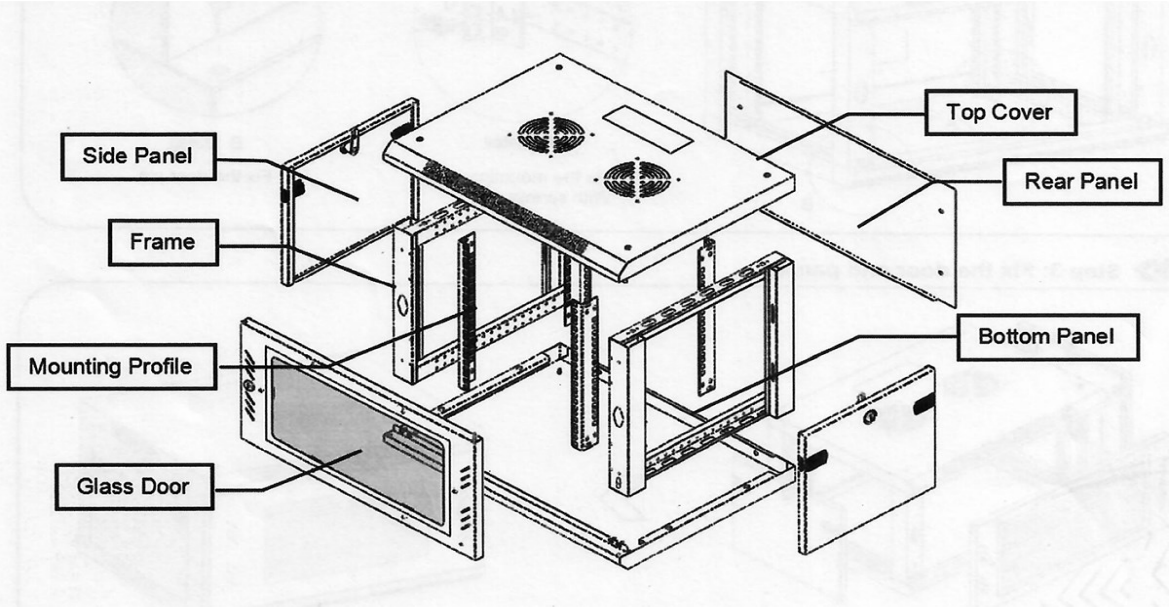

Assembly Instructions

Step 1: Attach frames to bottom panel

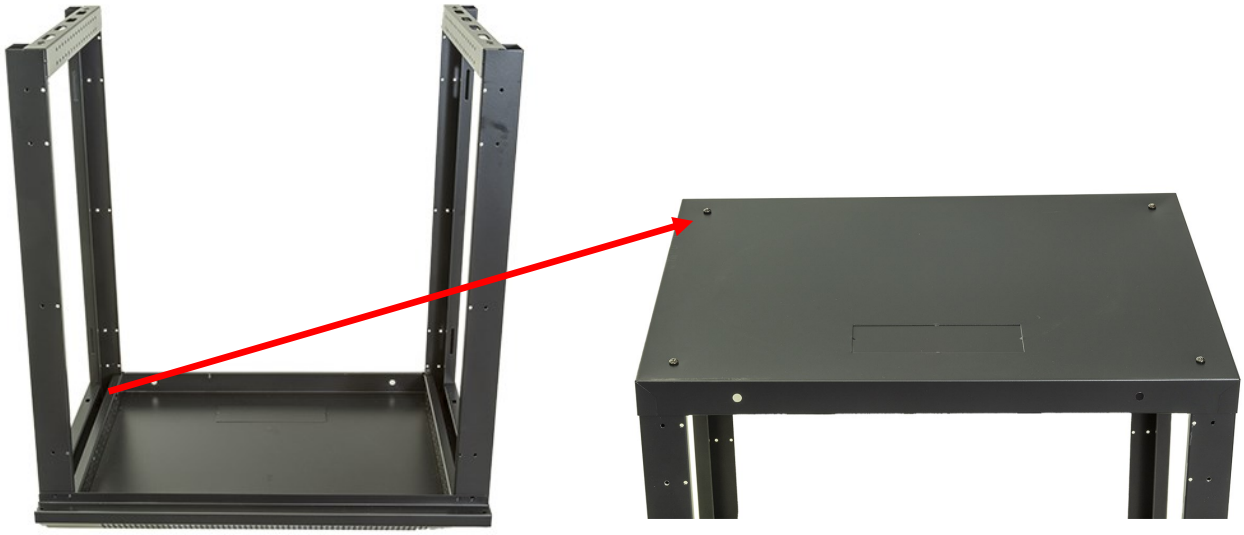

To start, lay down the bottom panel and attach both frame pieces using the included M5 screws. Flip upside down for easier attachment

Step 2: Attach the back panel to the frame

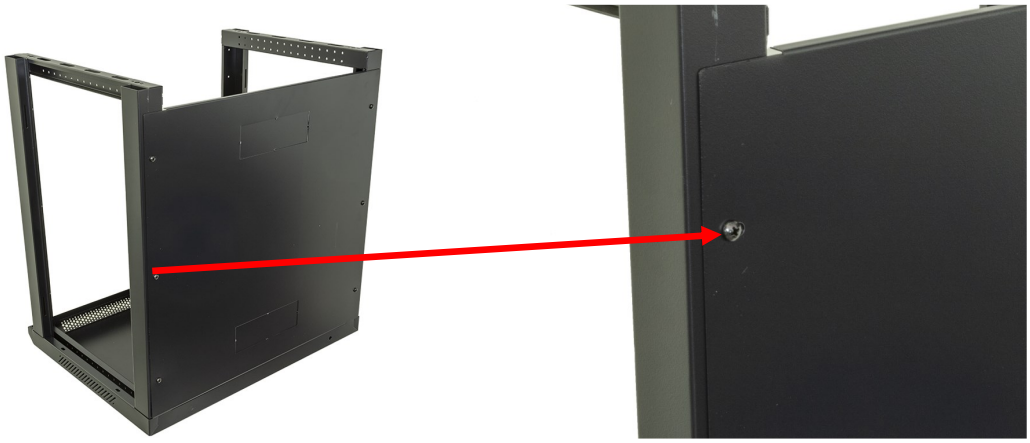

Using the M5 screws, attach the back panel to the back of the frame. Make note of the bottom panel alignment to ensure you are attach the back panel correctly.

Step 3: Fix the top panel to the front and back panels

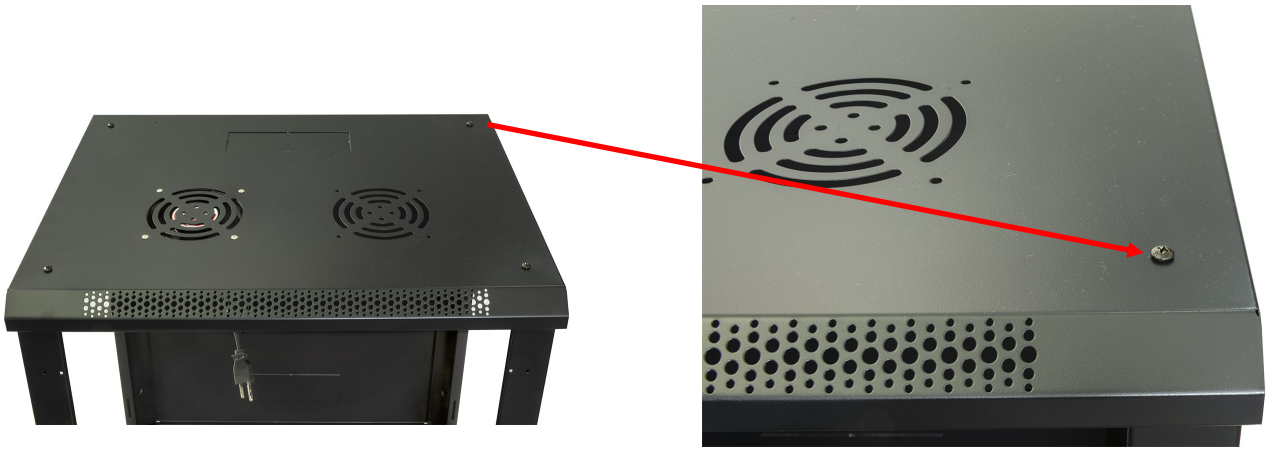

Place the top panel on top of the front and back panels and secure using four M5 screws.

Step 4: Attach mounting profiles to the mounting rails

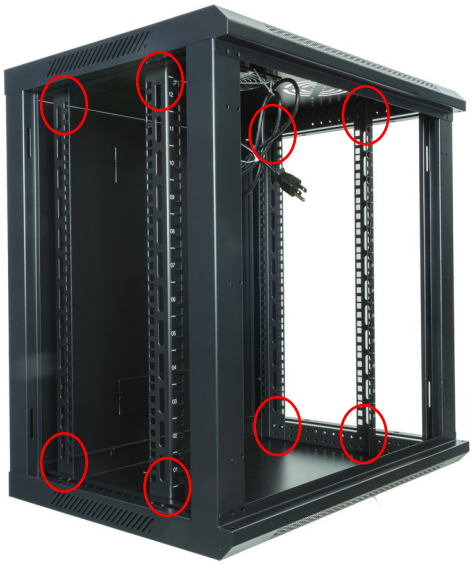

Using four mounting profiles and 16 M5 screws, secure the mounting profiles vertically in all corners of the cabinet.

Step 7: Attach side panels

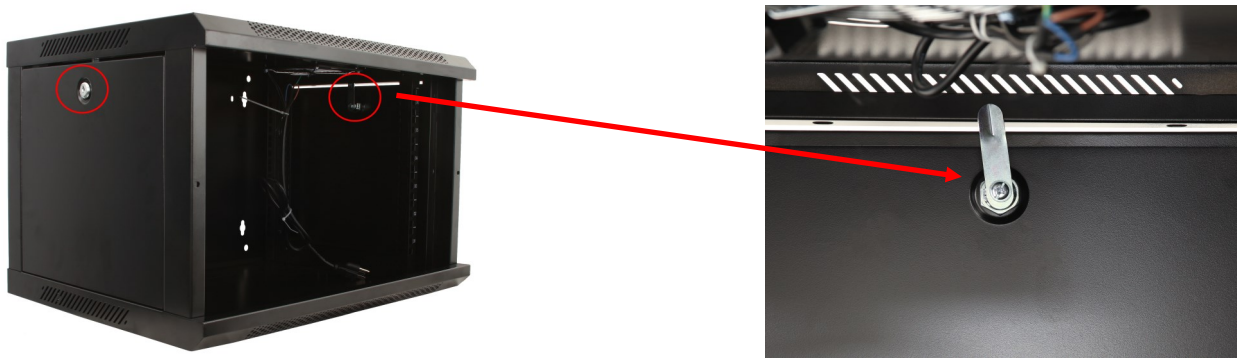

Before attaching the side panels to the cabinet, the locks need to be added. First, put the lock through the hole on the side panel and secure with the nut. Then add the locking tab and screw it onto the lock. Now, place the pegs on the bottom of the side panel into the slots on the cabinet, and tilt the side panel up and put the lock into the locked position. Repeat for other side. Check page 6 for assembling the locks to the side panels.

Step 8: Fix front door onto front panel

Before adding the front door, the lock needs to be added. Place the lock into the hole in the front door panel and secure with the nut. Then fix the locking tab on the lock and screw it in place. Now we can attach the door, by placing the door pin in the hole at the front right side of the bottom panel then placing the door on the pin. From the inside, pull down the top door peg and fix the door into place. Check page 6 for help assembling the lock to the door.

Assembly Instructions

Step 1: Position lock

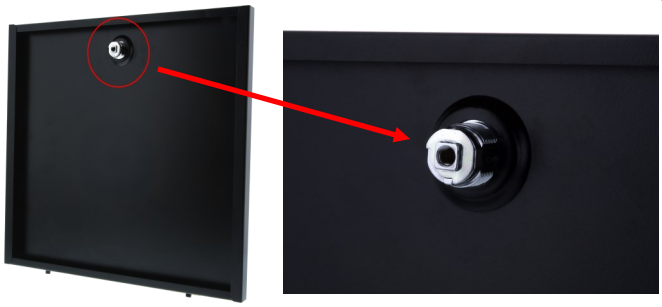

The first step to adding a lock to the door and side panels is to position the lock in the hole.

Step 2: Secure Lock

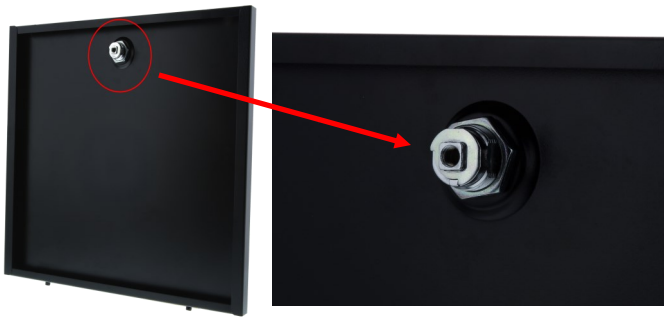

Next, you'll want to secure the lock to the surface using the provided nut.

Step 3: Add locking tab

After the lock is secure, position the locking tab. When positioning lock, rotate the lock with the key to find the locking and unlocking positions. Then you'll want to place the locking tab onto the lock, so when the door is locked, the locking tab is facing straight up.

Step 4: Secure locking tab

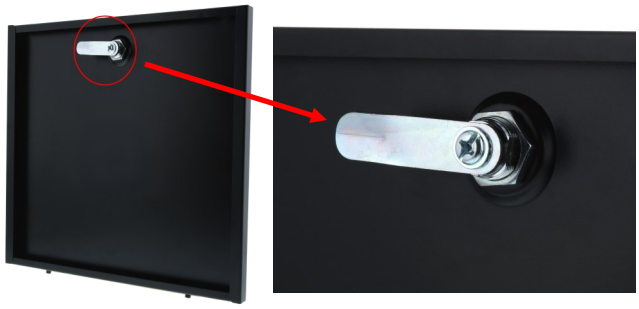

Finally, secure you locking tab with a screw. Now your door and side panels are ready for installation.